Panasonic Broadcast Mechanical Parts List

MODEL: AG-HVX200P,E,MC,AN,202EN

Note:

- *Be sure to make your orders of replacement parts according to this list.
- 2. Unless otherwise specified, all resistors are in OHMS, K=1,000 OHMS, all capacitors are in MICROFARADS (μF), P=μμF.
- 3. The P.C. Board unit marked with "■" shown below the main assembled parts.
- 4. The parts marked with ©on the exploded view show the electric parts.
- 6. The marking (RTL) indicates the retention time is limited for this item.


 After the discontinuation of this assembly in production, it will no longer be available.
- 7. "M" in Remark column indicates needed in the periodical maintenance.

CONTENTS

FRAME & CASING PARTS ASSEMBLY (1)	MPL-1
FRAME & CASING PARTS ASSEMBLY (2)	MPL-3
HANDLE EVF PARTS ASSEMBLY	MPL-5
LCD PARTS ASSEMBLY	MPL-7
PACKING PARTS	MPI -9

FRAME & CASING PARTS ASSEMBLY (1)

Components identified with the mark \triangle have the special characteristics for safety. When replacing any of these components, use only the same type.

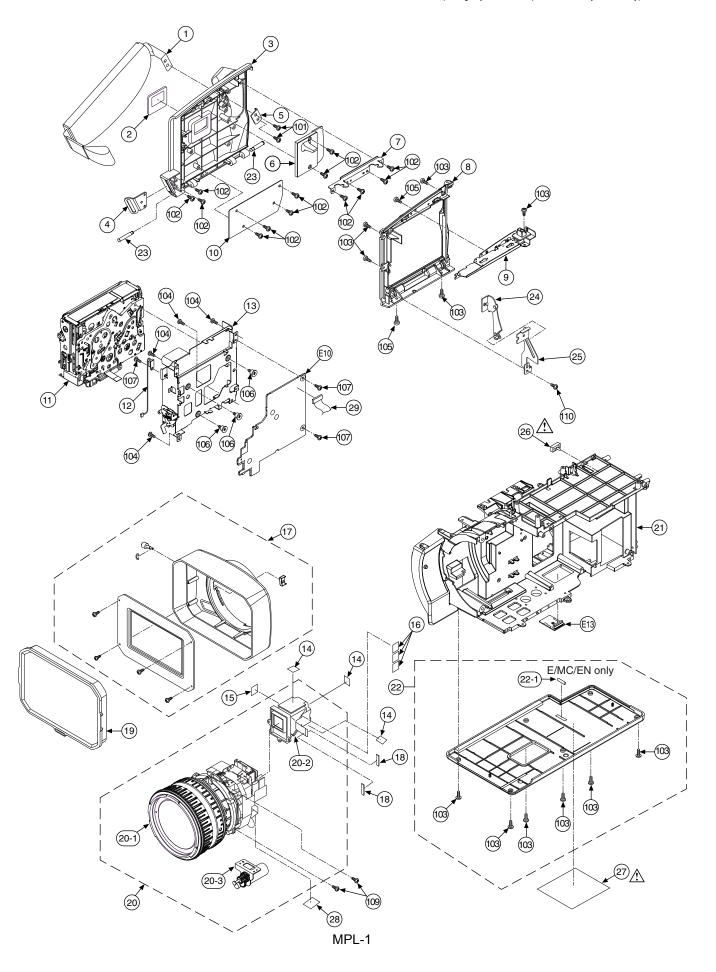


FRAME & CASING PARTS ASSEMBLY(1) Components identified with the mark have the special characteristics for safety. When replacing any of these components, use only the same type.

					· / ··	non ropidoling c	arry or triese components, use of	,y	the came type.
Ref. No.	Part No.	Part Name & Description	Pcs	Remarks	Ref. No.	Part No.	Part Name & Description	Pc:	Remarks
		•					•		
1	VFB0215	GLIP BELT	1						
2		CASSETTE COVER WINDOW	1						
3		GLIP COVER	1					l	
4		GLIP BELT ANGLE (FRONT)	1					H	
5	VMP8331	BELT FIX ANGLE	1						
	VMF 0331	GARAGE COVER OSAE	1						
6								-	
7		CASSETTE LOCK ANGLE	1						
8		GRIP FRAME	1						
		LOCK U	1						
		GRIP SHEET	1						
11	VXY1903Z1	MECHA U	- 1						
12	L2BB00000003	DEW SENSOR	1						
13		MECHA FRAME U	1						
		CERAMIC SHEET CDS	3					H	
		CERAMIC SHEET PRISM	1					-	
		HEAT RADIATION SHEET	3						
	VGQ8819/S	LENS HOOD	1						
	J0ZZZ0000053		2						
19	VGQ8820	HOOD CAP	1					Γ	
		CAMERA LENS U	1					T	
	VXW0769	LENS U	1						
		PRISM U	 '		H	1		1	
								┢	
	L6DABBKD0001		1		ļ	1		-	1
		MAIN FRAME	1						
		BOTTOM COVER U		FOR AG-HVX200P/AN		<u> </u>			
		BOTTOM COVER U		FOR AG-HVX200E/MC/202EN		<u> </u>		L	<u> </u>
	VMT1567	SOFT HIGH SHIELD GASKET	1	FOR AG-HVX200E/MC/202EN					1
		CASSETTE COVER SHAFT	2					T	
	VXL3325	LINK ARM U	1					t	1
	VMAOU09	LINK GUIDE	1					H	
		GASKET	1		 	 		\vdash	
				EOD AC HIVYOOOD				H	
		CAUTION LABEL		FOR AG-HVX200P				<u> </u>	
		CAUTION LABEL		FOR AG-HVX200E/MC/202EN				_	
		CAUTION LABEL	_1	FOR AG-HVX200AN				L	
28	VMT1762	LENS FPC COVER SHEET	-1						
29	VWJ1874	VTR MECHA FPC	1						
								H	
					-			<u> </u>	
101	VTDOG . COE IV	CODEM	_						
		SCREW	2						
		SCREW	13						
103	XQN2+B4FJK	SCREW	11						
104	XQN2+B4FN	SCREW	4						
105	XQN2+B4FJK	SCREW	2						
106	VHD1133	SCREW	3						
107	XQN2+B4FN	SCREW	3						
109	XYN3+F6FJ	SCREW	2					H	
		SCREW	1		-			<u> </u>	
110	AGINZ*DUUF UK	SULLI							
	1				ļ	1		-	1
			L					L	
E10	VEP03G91A	MECHA IF C.B.A.	1					L	<u> </u>
E13	VEP001N3A	BOTTOM CON C. B. A.	1					1	
								Г	
								Ħ	
	 					 		H	
					 	1		\vdash	+
					-			1	
	 					 		1	
	ļ					<u> </u>			
			L					L	
]		1	-]			
			t					t	1
			 					H	
			-					┢	
			_					<u> </u>	
			1					1	1
			t					t	1
			\vdash					┢	1
			-					H	
			_					<u> </u>	
			ı					ĺ	1

FRAME & CASING PARTS ASSEMBLY (2)


Components identified with the mark \triangle have the special characteristics for safety. When replacing any of these components, use only the same type.

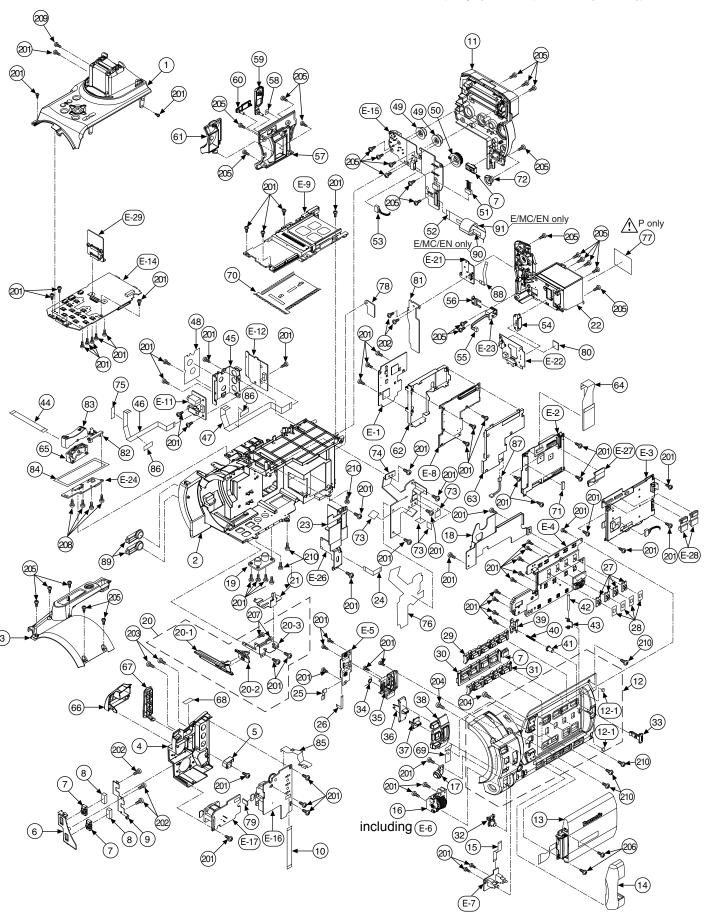

FRAME & CASING PARTS ASSEMBLY(2) Components identified with the mark have the special characteristics for safety. When replacing any of these components, use only the same type.

Dof M-				l	D. C. M.				
Ref. No.	Part No.	Part Name & Description	Pcs	Remarks	Ref. No.	Part No.	Part Name & Description	Pes	Remarks
		•			71	VMG1727	LENS CUSHION	1	
1	VYK1U58	TOP PANEL U	1		72	VGU9219	CAMERA/VCR BUTTON	1	
	VKM6880	MAIN FRAME	1			VSC5833	CERAMIC SEAT HEAT RADIATION	1	
			<u> </u>					4	
	VYK1U94	ZOOM SW CASE U	1		74	VSC5824	CDS HEAT SINK	1	
	VGM2152	JACK FRAME	1		75	VMZ3465	CD CON CUSHION	1	
5	VKW3303	AWB SENSOR WINDOW	1		76	VSC5845	CDS RADIATION SHEET	1	
6	VGQ8838	AUDIO SW COVER	1		▲ 77	VQL1J79	CAUTION LABEL	1	FOR AG-HVX200P
	VGU0A01	MODE SW KNOB	4		78	VYF3081	EVR COVER U	1	
	VMT1761	FRONT MIC SW SHEET	2		79	VMT1766	EVF FPC CUSHION	1	
			1						
	VMP8589	AUDIO SW PLATE	₽!		80	VMZ3631	C. B. A. BARRIER	- 1	
		12PIN4OMM FFC	1		81	VGF1050	DUSTPROOF SHEET	1	
11	VYK1Y37	BACK PANEL 1U	1		82	VGU9925	REC CHECK BUTTON	1	
12	VYK1U66	SIDE CASE R 1U	1		83	VGU9215	ZOOM LEVER	1	
12-1	VMG1286	CUSHION RUBBER	2		84	VMZ3406	ZOOM PCB BLIND SHEET	1	
	VYK1U47	LCD U	1		85	VWJ1844	SIDE JACK FPC	1	
	VGQ8773	LCD HINGE COVER	1		86	VMT1749	FFC FIX SHEET	2	
			<u> </u>					_	
	VWJ06H2033L0		1		87	VEE1C05	BATTERY-POWER CABLE	1	
	VEK0J73	IRIS DIAL U	1		88	VWJ06H2060L0	6PIN FFC	1	
17	VGU9929	AWB BUTTON	1		89	VJF1468	XLR CAP	2	
	VSC5806	SIDE R HEAT SINK	1		90	VMT1774	CORE TAPE	1	FOR AG-HVX200E/MC/202EM
	VMP8615	TRIPOD FRAME	1		91	J0KD00000103		1	FOR AG-HVX200E/MC/202EM
	VYQ3733	CLUTCH U	T i		- '	- 5 500000100		t '	
			+-					-	
	VGU9936	CLUTCH KNOB	믄					-	1
	VGP6167	CLUTCH PANEL	\perp^1					ļ_	
20-3	VMP8557	CLUTCH FRAME	1		201	XQN2+B4FN	SCREW	74	
21	VMP8558	CLUTCH ARM ANGLE	1		202	XQN2+BJ5FJK	SCREW	5	i
	VYK1Y38	BATTERY CASE 1U	1		203	XYN26+A6FJK	SCREW	2	
	VSC5801	CCD HEAT SINK	1		204	XQN2+BJ6FJ	SCREW	2	
		10PIN30MM FFC	+		205	XQN2+B4FJK	SCREW	27	1
			<u> </u>						
		12PIN5OMM FFC	1		206	XYN2+C5FJ	SCREW	2	
26	VWJ06H2045L0	6PIN45MM FFC	1		207	XQN2+BJ4FJK	SCREW	2	
27	VGU9894	SLIDE KNOB	4		208	XQN16+BJ4FJK	SCREW	4	
28	VGH4857	SLIDE KNOB SHEET	4		209	XQN2+A5FJK	SCREW	1	
	VGU9931	LCD BUTTON B	1		210	VHD1887	SCREW	7	
	VGU9935	COUNTER BUTTON	+		210	VIID1007	JONEH	,	
			₽!						
	VGU9930	LCD BUTTON A	1						
32	VGU9937	EVF DTL BUTTON	1						
33	VGU9197	MONITOR LOCK KNOB	1		E1	VEP03G90C	VTR C. B. A.	1	FOR AG-HVX200P/AN
34	VMB4017	FOCUS SPRING	1		E1	VEP03G90D	VTR C. B. A.	1	FOR AG-HVX200E/MC/202EM
	VGQ8772	CAM OP BACKUP	1		E2	VEP23655A	CAMERA C. B. A.	1	FOR AG-HVX200P/AN
	VGU9928		1		E2			1	· · · · · · · · · · · · · · · · · · ·
		ND KNOB	<u>. </u>			VEP23655B	CAMERA C. B. A.	<u> </u>	FOR AG-HVX200E/MC/202EN
	VGU9926	FOCUS KNOB	1		E3	VEP03G89A	CODEC C. B. A.	1	FOR AG-HVX200P/AN
38	VGU9927	CAM OP BUTTON	1		E3	VEP03G89B	CODEC C. B. A.	1	FOR AG-HVX200E/MC/202EM
39	VMP7331	OPENER HOLDER ANGLE	1		E4	VEP001M6A	R SIDE C.B.A.	1	
40	VMB3996	POP UP SPRING	1		E5	VEP06G20A	CAM OP1 C.B.A.	1	
	VGQ6901	MONITOR KNOB	1		E6	VEP06G21A	CAM OP2 C. B. A.	1	
	VMS7187	LCD LOCK SHAFT	H		E7	VEP06G22A	CAM OP3 C. B. A.	1	
	VMB3659			l l					
44		MONITOR OPENER SPRING			E8	VEP01978A	POW C. B. A.	1	
		MONITOR OPENER SPRING 6PIN33MM FFC	1			VEP03G92B	P2 CARD C. B. A.	1	
			1		E9	VEP03G92B		1 1	
45	VMP8552	6PIN33MM FFC	1 1 1		E9 E11	VEP03G92B VEP04904A	P2 CARD C. B. A.	1 1 1	
45 46	VMP8552 VWJ12H2120L0	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC			E9 E11 E12	VEP03G92B VEP04904A VEP001P2A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A.	1 1 1 1	
45 46 47	VMP8552 VWJ12H212OL0 VWJ16H2145L0	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC	1		E9 E11 E12 E14	VEP03G92B VEP04904A VEP001P2A VEP001M1A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A.	1 1 1 1	
45 46 47 48	VMP8552 VWJ12H212OLO VWJ16H2145LO VGH4874	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE	1		E9 E11 E12 E14 E15	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A.	1 1 1 1 1	
45 46 47 48 49	VMP8552 VWJ12H212OLO VWJ16H2145LO VGH4874 VGU9721	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB	1 1 2		E9 E11 E12 E14 E15 E16	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A.	1 1 1 1 1 1	
45 46 47 48 49 50	VMP8552 VWJ12H212OLO VWJ16H2145LO VGH4874 VGU9721 VYQ3547	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD	1 1 2 1		E9 E11 E12 E14 E15 E16 E17	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A.	1 1 1 1 1 1	
45 46 47 48 49 50	VMP8552 VWJ12H212OLO VWJ16H2145LO VGH4874 VGU9721	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB	1 1 2		E9 E11 E12 E14 E15 E16	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A.	1 1 1 1 1 1 1	
45 46 47 48 49 50 51	VMP8552 VWJ12H212OLO VWJ16H2145LO VGH4874 VGU9721 VYQ3547 VEE1CO6	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD	1 1 2 1		E9 E11 E12 E14 E15 E16 E17	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP001M4A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A.	1 1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52	VMP8552 VWJ12H212OLO VWJ16H2145LO VGH4874 VGU9721 VYQ3547 VEE1CO6 VWJ24H203OLO	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC	1 1 2 1 1		E9 E11 E12 E14 E15 E16 E17 E21	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP001M4A VEP01979A	P2 CARD C, B, A. SIDE JACK2 C, B, A. SD CARD C, B, A. TOP OP C, B, A. BACK PANEL C, B, A. SIDE JACK1 C, B, A. EXT MIC 2 C, B, A. POWER SW C, B, A. BATTERY C, B, A.	1 1 1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE	1 1 2 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP001M4A VEP01979A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD	1 1 1 1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54	VMP8552 VWJ12H212OL0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL	1 1 2 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP04903A VEP01971A VEP01971A VEP01M5A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. SIDE JACK1 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A.	1 1 1 1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VEE1C06 VEE1C12 K4ZZ04000036 VEE1C20	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE	1 1 2 1 1 1 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04902A VEP04903A VEP01979A VEP01971A VEP01M5A VEP02370A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. SIDE JACK1 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYRO C. B. A.	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE	1 1 2 1 1 1 1 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP04903A VEP01979A VEP01971A VEP01M5A VEP22370A VEP2370A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYRO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L	1 1 2 1 1 1 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE	1 1 2 1 1 1 1 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP04903A VEP01979A VEP01971A VEP01M5A VEP22370A VEP2370A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYRO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 65 55 56 57 58	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L	1 1 2 1 1 1 1 1 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 4 55 55 56 57	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VY03547 VEE1006 VWJ24H2030L0 VEE1012 K4ZZ04000036 VEE1020 VWP7340 VGP6163 VGH4881 VJF1544	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP	11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1620 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER	11 11 11 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VYE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B	11 11 11 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1620 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER	11 11 11 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VYE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B	11 11 11 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 65 57 58 59 60 61 62 63 64	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VWBP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1545 VJF1545 VJSC5805 VSC5804 VWJ1845	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER SHIELD PLATE B SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC	11 11 11 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 65 57 58 59 60 61 62 63 64 65	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1012 K4Z204000036 VEE102 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805 VSC5804 VWJ1845 VYQ3807	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC ZOOM SW 1 U	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 15 55 56 57 58 59 60 61 62 63 64 65 66	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VWJ16H2145L0 VGH4874 VGU9721 VY03547 VEE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5806 VSC5806 VSC5804 VWJ1845 VY03807 VJF1542	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE—R FPC ZOOM SW 1 U SIDE JACK CAP A	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4Z204000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805 VSC5804 VWJ1845 VYQ3807 VJF1542 VJF1543	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC ZOOM SW 1 U SIDE JACK CAP A SIDE JACK CAP A	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 49 550 551 552 553 554 555 66 60 61 62 63 64 66 66 66 66 66 66 66 66 66 66 66 66	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805 VSC5804 VWJ1845 VYQ3807 VJF1542 VJF1542 VJF1543 VGH4876	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC ZOOM SW I U SIDE JACK CAP B JACK NAME PLATE 2	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 49 55 50 50 551 552 55 56 57 57 558 59 60 61 62 63 64 66 66 66 66 66 66 66 66 66 66 66 66	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4Z204000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805 VSC5804 VWJ1845 VYQ3807 VJF1542 VJF1543	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC ZOOM SW 1 U SIDE JACK CAP A SIDE JACK CAP A	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 49 550 550 551 552 553 554 555 566 60 61 62 63 664 665 666 667 668 669 669	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1006 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805 VSC5804 VWJ1845 VYQ3807 VJF1542 VJF1542 VJF1543 VGH4876	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC JACK PLATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP USB COVER JACK COVER SHIELD PLATE B SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC ZOOM SW I U SIDE JACK CAP B JACK NAME PLATE 2	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	
45 46 47 48 49 50 51 52 53 54 55 56 60 61 62 63 64 65 66 67 68 69	VMP8552 VWJ12H2120L0 VWJ16H2145L0 VGH4874 VGU9721 VYQ3547 VEE1C06 VWJ24H2030L0 VEE1C12 K4ZZ04000036 VEE1C20 VMP7340 VGP6163 VGH4881 VJF1544 VJF1545 VJF1541 VSC5805 VSC5804 VWJ1845 VYQ3807 VJF1543 VGH4876 VMF1543 VGH4876	6PIN33MM FFC JACK ANGLE 12PIN120MM FFC 16PIN145MM FFC 14C LATE AUDIO VR KNOB MODE DIAL U P. C. BOARD AUDIO CABLE 24PIN30MM FFC 1394 CABLE BATTERY TERMINAL DC IN-BATTERY CABLE DCIN ANGLE SIDE COVER L LED NAME PLATE SD CARD CAP JACK COVER SHIELD PLATE B SHIELD PLATE B SHIELD PLATE A CAMERA TO SIDE CASE-R FPC ZOOM SW 1 U SIDE JACK CAP A SIDE JACK CAP B JACK NAME PLATE 2 HINGE FPC HOLD SHEET	11 11 12 2 11 11 11 11 11 11 11 11 11 11		E9 E11 E12 E14 E15 E16 E17 E21 E22 E23 E24 E26 E27 E28	VEP03G92B VEP04904A VEP001P2A VEP001M1A VEP001M2B VEP04902A VEP04903A VEP01979A VEP01971A VEP01971A VEP01971A VEP01974A VEP02370A VEP03G96A VEP03G96A	P2 CARD C. B. A. SIDE JACK2 C. B. A. SD CARD C. B. A. TOP OP C. B. A. BACK PANEL C. B. A. SIDE JACK1 C. B. A. EXT MIC 2 C. B. A. POWER SW C. B. A. BATTERY C. B. A. DC IN P. C. BOARD ZOOM SW C. B. A. GYPO C. B. A. CAMERA TOP FPC C. B. A.	1 1 1 1 1 1 1 1	


HANDLE EVF PARTS ASSEMBLY

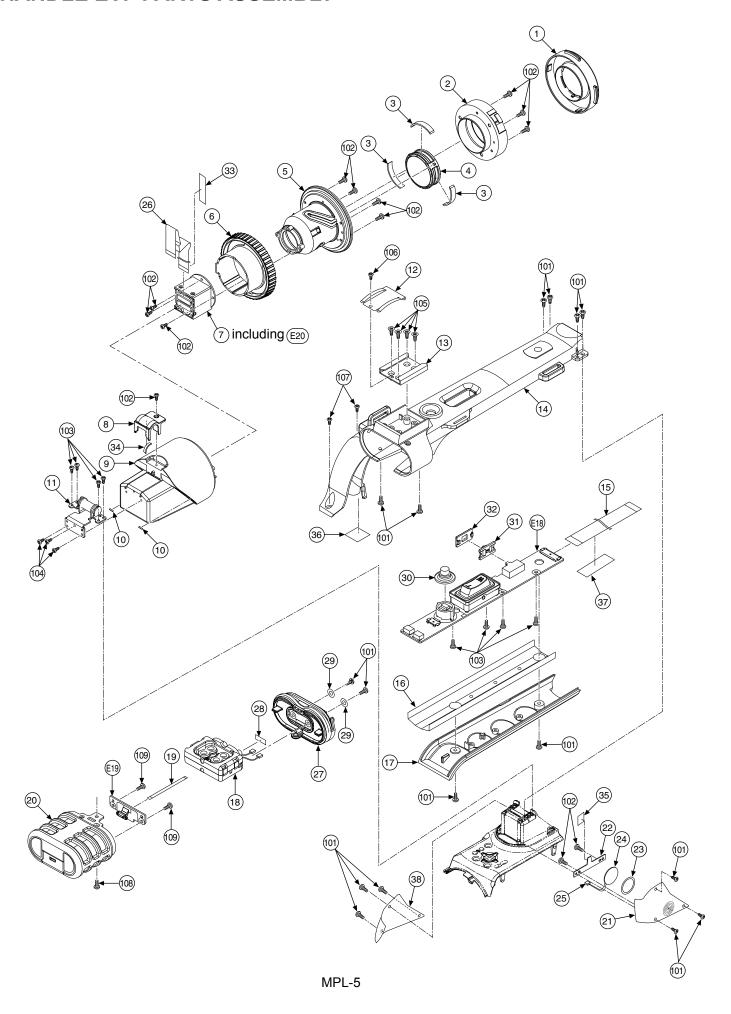

HANDLE EVF PARTS ASSEMBLY


Ref. No.	Part No.	Part Name & Description	Pcs	Remarks	Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
							-		
2		EYE CAP U EYE CAP BASE	1						
3		LENS SPACER SHEET	3						
4		EVF LENS ASS' Y	1						
5		HELICOID	1						
6		DIOPTOR ADJ RING	1						
7		EVF LCD HOLDER U	1						
9		EVF HINGE COVER EVF CASE	1						
10		CUSHION RUBBER	2						
11	VKC0594	VF HINGE	1						
12	VMC1697	SPRING	1						
13		SHU	1						
14		HANDLE	1						
15 16	VWJ24H2060L0 VXA8302	24PIN6OMM FFC HANDLE SHIELD	1						
17		HANDLE GRIP	1						
18		MIC U	1						
19	VWJ10H2065L0	10PIN65MM FFC	1						
20	VYK1W30	MIC CASE 1U	1						
21		VF CASE R	1						
22		SPEAKER SUPPORT ANGLE	1						
23	VKN0185 L0AA02A00057	SPEAKER NET	1					-	
24		SPEAKER HARNESS	1						
26		DVF FPC	1						
27	VMG1732	MIC DUMPER RUBBER	1						
28	VMT1767	MIC DUMPER SHEET	1						
29	XWG2FJ	WASHER	2						
30		REC BUTTON	1						
31		SLIDE KNOB	1						
32 33		SLIDE KNOB SHEET SUPPORT SHEET	1						
34		EVF FPC CUSHION	1						
35		SP SHEET	1						
36		HANDLE GRIP SPACER SHEET	1						
37	VMZ3474	LCD BARRIER (C)	1						
38	VGP6170	VF CASE L	1						
101	XQN2+B4FJK	SCREW	16						
102		SCREW	13						
103		SCREW	8						
104		SCREW	3						
105		SCREW	4						
106	XSN2+4FC	SCREW	1						
107		SCREW	2						
108 109		SCREW SCREW	2		-				
100	Value , DOAL A	OONLII							
			П						
E18		HANDLE C. B. A.	1	-					
E19		REMOCON F C. B. A.	1						
E20	VEP29166A	EVF CONNECT C. B. A.	1						
								-	
			Ш						
			H					-	
								-	
					1			l	I

LCD PARTS ASSEMBLY

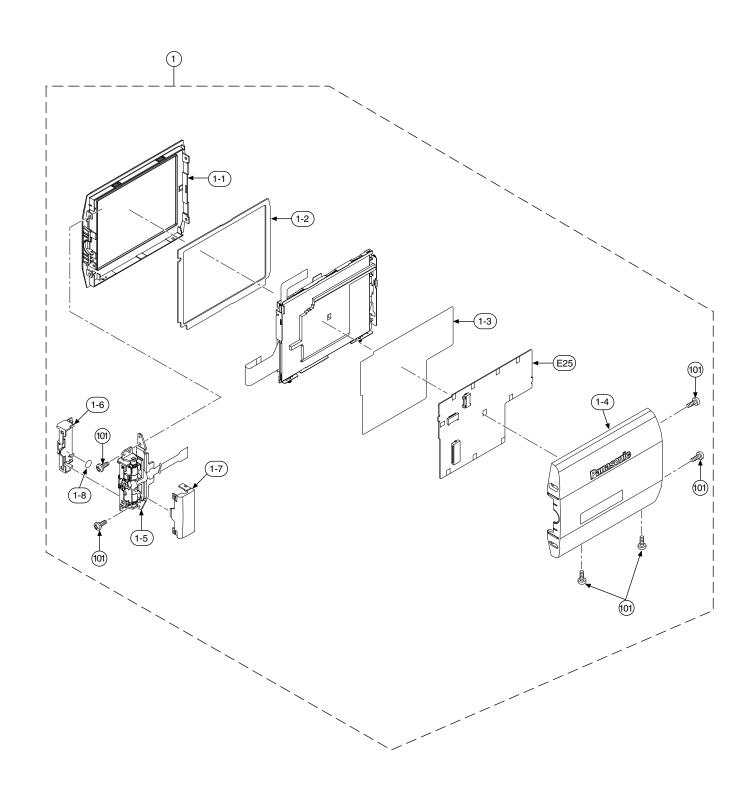

LCD PARTS ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks	Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
1	VYK1U47	LCD U	1						
1-1	VGP6152	LCD CASE BOTTOM	1						
1-2	VMT1717	WATER PROOF PAD	1						
1-3	VMZ3610	LCD PCB INSULATION SHEET	1						
1-4	VYK1U67	LCD CASE U	1						
1-5	VXD0465	HINGE	1						
1-6	VGQ8616	HINGE COVER (LOWER)	1						
1-7	VGQ8775	HINGE COVER TOP	1						
1-8	VMG1286	CUSHION RUBBER	1						
101	XQN16+B4FJK	CODEM	6						
101	AUN 10+D4FJK	SUKEW	0						
E25	VEP08346A	LCD LEV	1						
					I -		<u>-</u>		
					1				
					—				
					-				
									
			LT						
					1				
					1				
					-				
					ļ				
					I -		<u>-</u>		
					1				
					—				
					1				
					1				
					—				
					1				
			_		1		I	1	1

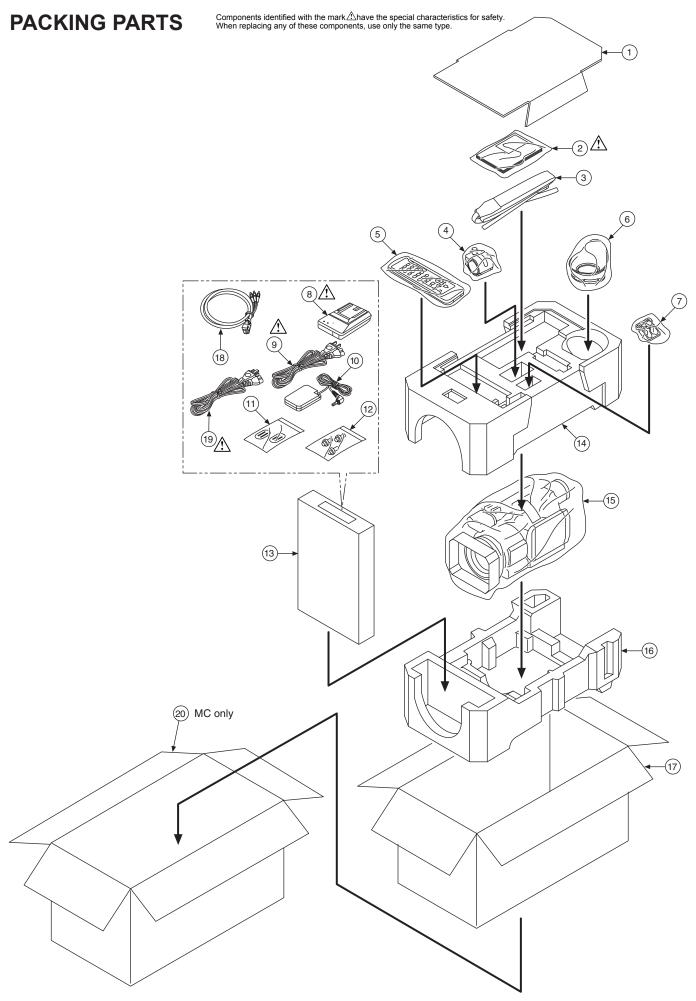

MPL-9

PACKING PARTS ASSEMBLY

Components identified with the mark \triangle have the special characteristics for safety. When replacing any of these components, use only the same type.

A 2 A 2 A 2 A 2	VPN6400 VQT0S52	Part Name & Description PARTITION OPERATING INSTRUCTIONS	Pcs 1	Remarks	Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
A 2 A 2 A 2 A 2	VQT0S52		1						
▲ 2 ▲ 2 ▲ 2 ▲ 2	VQT0S52								
△ 2 △ 2 △ 2		TIPERATURE INCIDIO LINE	1	FOR AG-HVX200P					
∆ 2 △ 2	VQT0S53	OPERATING INSTRUCTIONS		FOR AG-HVX200E					
∆ 2		OPERATING INSTRUCTIONS		FOR AG-HVX200MC					
		OPERATING INSTRUCTIONS		FOR AG-HVX202EN					
▲ 2		OPERATING INSTRUCTIONS		FOR AG-HVX200AN					
		SHOULDER BELT	1						
4		MIC HOLDER U	1						
5	VFA0463	WIRERESS REMOTE CONTROLLER	1	FOR AG-HVX200P					
5		WIRERESS REMOTE CONTROLLER	1	FOR AG-HVX200E/MC/AN/202EN					
		EYE CAP	1						
		MIC HOLDER ADAPTOR	1						
		AC ADAPTOR		FOR AG-HVX200P					
		AC ADAPTOR		FOR AG-HVX200E/MC/202EN					
		AC CORD U		FOR AG-HVX200P					
		AC CORD U		(TYPE C) FOR AG-HVX200E/202E					
		AC CORD U		FOR AG-HVX200MC					
	K2GJ2DZ00024 VFC4182	FERRITECORE U	1	FOR AG-HVX200P/E/MC/202EN					
	K2RYYYYY0001		1		-				
		ACCESSORY BOX	1						
		CUSHION (TOP)	1					-	-
		POLYETHYLENE BAG	1						
		CUSHION (BOTTOM)	1						
		PACKING CASE		FOR AG-HVX200P					
		PACKING CASE		FOR AG-HVX200E					
		PACKING CASE		FOR AG-HVX200MC					
	VPG1H68	PACKING CASE		FOR AG-HVX202EN					
		PACKING CASE	1	FOR AG-HVX200AN					
		COMPONENT CABLE	1						
		AC CORD U		TYPE BF (UK) FOR AG-HVX200E					
20	VPG1G05	PACKING CASE (OUT)	1	FOR AG-HVX200MC					
					-				
								<u> </u>	
-									
								<u> </u>	
								-	
								-	
					-			-	
								-	
								<u> </u>	-
								-	
								-	-
							ļ	1	!
		· · · · · · · · · · · · · · · · · · ·							